

 
INSTALLATION GUIDE · CANON EOS DSLR & MIRRORLESS

Load a style onto your camera

Picture Styles install with Canon's free EOS Utility 3. It takes just a few minutes. Follow the steps below.

What you'll need


-  Your Canon camera, charged
-  Its USB cable
-  A Mac or Windows computer
-  Your .pf3 Picture Style file



01 Install EOS Utility 3

Canon's free software for Mac and Windows. On Canon's support site, choose your camera model, open **Software & Drivers** and download **EOS Utility 3**.

On a Mac and can't find it? Choose an older macOS version in the OS menu.

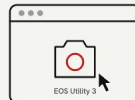

02 Open EOS Utility 3

Launch it on your computer and leave it open. It waits until a camera is connected.




03 Connect your camera

Plug the camera into your computer with its USB cable and switch it on. EOS Utility finds it on its own.


Not detected? Try another cable or port, and close other photo apps.

04 Register the style

Register one style, or up to three at a time by filling each User Def. tab before you click OK.

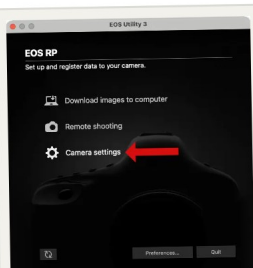

a Click Camera settings.

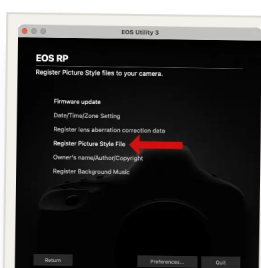


b Click Register Picture Style File.




c Pick a User Def. tab, click the folder, select your .pf3.



d Check the style name appears, then click OK.

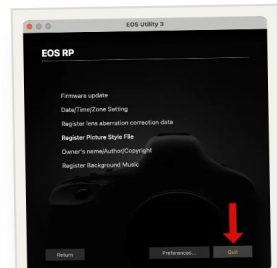

e Click Quit. The style is saved on your camera.

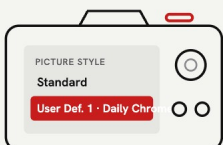

05 Shoot with it

Disconnect the camera, open its **Picture Style** menu and choose the User Def. slot you used. Your style's name shows in that slot.

Three slots, swap any time

Your camera holds three User Def. styles. Registering a new one replaces what's in that slot, and your .pf3 files stay on your computer.